

Personal Video Recorder

A Personal Video Recorder, or PVR, incorporates the features of a VCR with that of a computer. The PVR gives you the ability to record the programs you want and play back as your schedule allows, but adds features that aren't available with a VCR. The PVR has a hard drive that records up to 40 hours of programming, and provides a consistent quality. Recordings can be scheduled from the interactive program guide, which simplifies the steps to set up a future recording.

IMPORTANT NOTE: The 'STB' button must be pressed before activating the PVR service.


RECORDING OPTIONS:

The PVR has the ability to record one program while you watch another, and provides three options for recording.

1. **Recording A Current Program:** Press the **RECORD** button on the Remote. (This will record the program that is being viewed at that time from when **RECORD** is pressed until the end of the program).
2. **Recording A Program Scheduled Later:** Press the **GUIDE** button on the Remote, use the arrow buttons to highlight the desired program and press the **RECORD** button.
3. **Record A Recurring Event:** Press the **MENU** button and press **OK** on the PVR icon. Under the PVR menu highlight 'Schedule Event' and press **OK**. A screen will appear where you can enter the channel number, time, date, length and frequency that a program should be recorded and press **OK** when completed.

Notes:

- When the PVR is recording an Amber Light will appear on the front and turn off when recording is complete. In the Guide, a Red Dot will appear to signal the program as being recorded. The Info Bar will say 'RECORD' on the right.
- Once the PVR has reached 40 hours of recorded programming any new recordings will overwrite the oldest previously recorded program unless the program is locked.

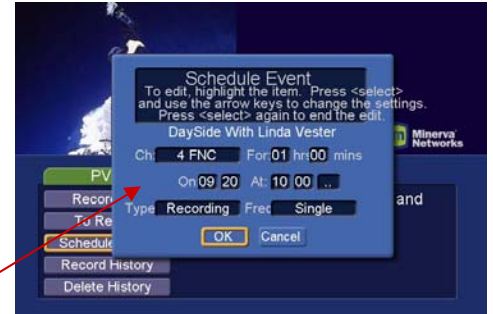

ACCESSING THE PVR:

- To access a recorded program press the **MENU** button on the remote. Highlight the PVR icon and press **OK**. Press **OK** on the 'Recordings' option to view all of the programs stored on the PVR.
- Using the Arrow Keys scroll through Recorded Programs and press **OK** on desired Program. This will bring up a list of options:
 - **Play Recording:** Allows you to view the recording.
 - **Resume Play:** Plays the recording from where the program last stopped. (This option only appears on programs that have been previously viewed)
 - **Lock:** Prevents a recorded program from being overwritten.
 - **Delete Recording:** Erases the program from the PVR.
 - **Cancel:** Returns you to the PVR Menu.

Notes:

- As a program is being played back a green light will appear on the front of the PVR and turn off when the playback is stopped.



LIVE TELEVISION:

- The PVR can Pause, Rewind, and Fast Forward live programs by using the corresponding buttons on the lower portion of the remote. (Shown to the right)
- To manipulate live TV, press the **PAUSE** button to launch the functionality. Once paused, you can rewind or fast forward the program to the desired location. To return to live TV, press **STOP**.

Notes:

- Rewinding live TV can only go to the point where you began watching the program. Changing channels will lose the portion stored.

